



# Vantage II Alarm Instructions

## Battery Installation:



1. Remove the (2) two security screws at the top of the stand with the SKP-200K Security Wrench. (Save these screws for reinstallation).



2. Pull the Battery Holder Tab from inside of the stand (you will find it lodged in the tube after the top has been removed).



3. Install (3) three new Alkaline AAA Batteries making sure to follow the (-) negative and (+) positive polarity markings on the battery holder.



4. Insert the Battery holder into the display stand tube and replace the top. Replace and tighten the screws.

**NOTE: the LED Light on the stand will blink yellow. This only indicates that the Vantage Alarm has power but has not been programmed.**

## Mounting Instructions:

### Install the Vantage Alarm Base




1. Remove the (2) two security screws around the base of the stand with a SKP-190 TPS Security Bit. (Save these screws for reinstallation).



2. Lift the stand off from the base plate.

## Mounting the Vantage Alarm:

3. Position the Vantage Alarm Base Plate(s) on the display as you want the stands to be positioned. (See the Base Plate Template for Positioning & Marking). For Drilling: mark the display through the provided Base Plate Template with an awl or center punch.
4. Drill holes for the size and type of hardware you intend to use to secure the base plate to the display.
5. Mount the Base Plate(s) to the display:  
The base plate provides (4) four 1/4 inch holes for mounting hardware. Use the appropriate wood screws, metal screws or nuts & bolts for your display surface. (We Do Not Recommend Using Flat Head Beveled Screws to mount the base plate to the display). **For Glass Displays:** we recommend using double sided adhesive mounting pads.

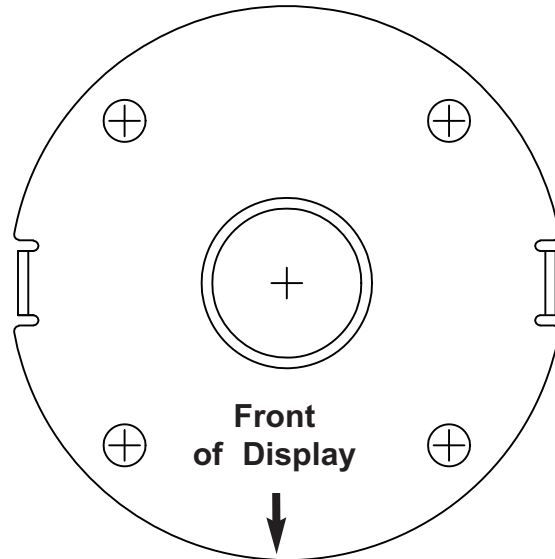

6. Place the Stand(s) on the mounted Base Plate(s) so the screw holes on each side of the cone will align with the holes on each side of the base plate.



7. Lower the plastic cone aligning the screw holes, replace the (2) two security screws and tighten with the SKP-190 TPS Security Bit.



**NOTE: the LED Light on the stand will blink yellow. This indicates that the Vantage Alarm has power but has not been programmed. The yellow light blinks all the time until prograded.**



**Se-Kure Controls,® Inc.**

3714 Runge Street • Franklin Park, IL 60131 • 1-(800) 322-2435 • (847) 288-1111 • Fax: (847) 288-9999

Rev. 04/21/08 SCI-9891 ©2007 Se-Kure Controls, Inc.