




## INSTALLATION INSTRUCTIONS

# 1 + 1 Security System

**SK-415**

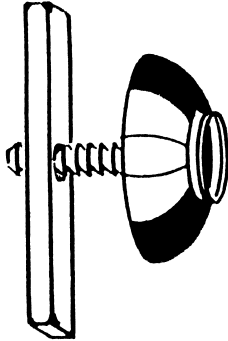

1 + 1 Slot Wall Anchor

**SK-1709**



Round Adhesive Pads

**SK-1909**




Rectangular Adhesive Pads

**SKP-200T**




Wire Removal Tool

**SK-1912**

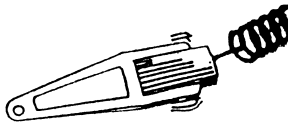

Rectangular Removal Tool

**SKP-416K**

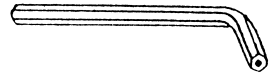

Allen Wrench

## Cables are available in four end designs

**Lasso**



**Tult**



**Rectangular Plug**



**Telephone Modular**



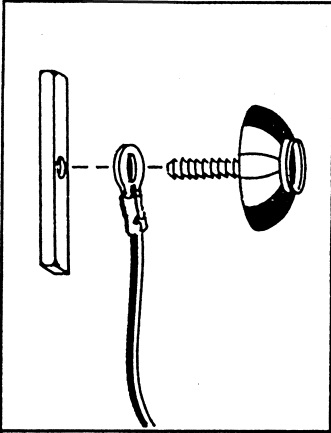


Fig. 1

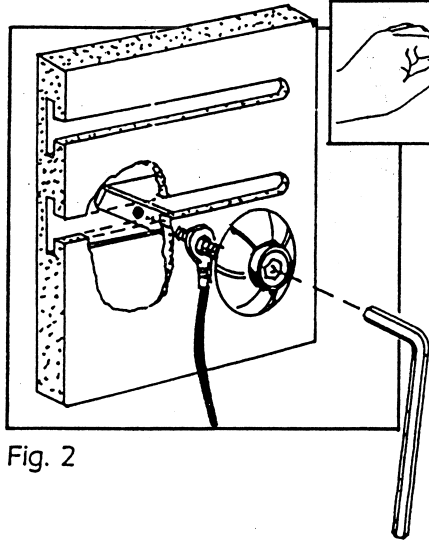


Fig. 2



Fig. 3

## INSTALLATION INSTRUCTIONS

### 1 + 1 Slot Wall Connector:

- 1. Unscrew the 1 + 1 Slot Wall Connector and place the eyelet ends of the selected cables onto its screw threads.** Screw the flat bar **loosely** back onto the 1 + 1. See Fig. 1
- 2.** Insert the flat bar end of the 1 + 1 into the slot wall and turn clockwise. **The bar will turn** to an angle within the slot wall, **to anchor** the cables. See Fig. 2.
- 3.** Tighten the 1 + 1 with the Allen Wrench (SKP-200K) until secure.

### Rectangular Plug and Tuit Connection:

- 1. Clean the surface area of the product and the bottom of the Plug** with an Alcohol Prep Pads. **Wipe these surfaces dry** with a clean dry paper towel.

**NOTE: If the paper towel shows dirt, repeat this step until the surface is clean and dry. See Fig. 3.**